


Thermo-Brace® Interior Board


INSTALLATION INSTRUCTIONS

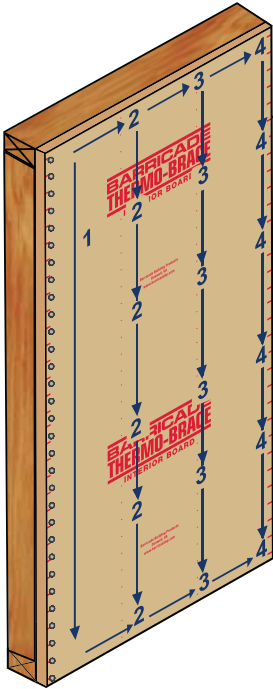

Step 1

DO NOT fasten the four corners first.


1. Starting at the top left of the panel, begin fastening from top to bottom, referring to the fastener schedule on the front side of the panel for proper fastener spacing.

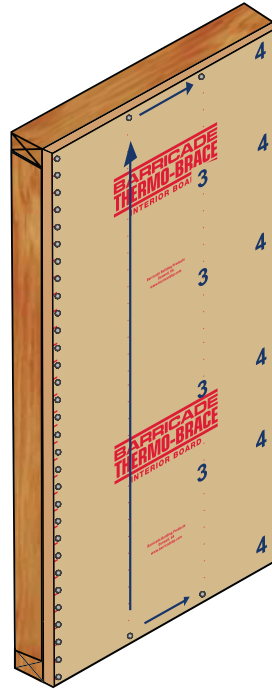

Steps 2 & 3

2. Moving across the panel, attach fasteners at the top and bottom of the panel until you reach the next stud (it is important when using staples to fasten them in a parallel direction to the stud).

3. Fasten panel in numerical order repeating the procedure described in steps 1 and 2.

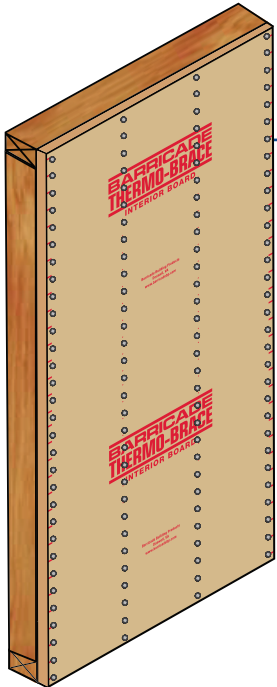

Step 4

4. Continue until the Thermo-Brace Interior Board panel is properly secured to the frame.



Step 5

5. In order to prevent gaps or rippling, it is important to move across from one side of the panel to the other when installing.

DO NOT fasten the four corners first.

Thermo-Brace® Interior Board sheathing is to be installed parallel to studs, and secured with 1/4" x 1" x 0.030" min. staples, spaced 6" o.c. edge and 12" o.c. field. An adhesive may be applied for additional strength and stability. Customer may adjust fastener placement order as needed.